

LUBRICATION AND MAINTENANCE JOLLY 100



Internal view of the mechanical transmission after removing the sheet metal cover


tensioner for belt

bearing lubrication



On both sides there are 2 lubrication points: one for the sliding of the rollers and one inside for roller's support

on both sides there are 2 lubrication points: one for the sliding of the rollers and one inside for roller's support

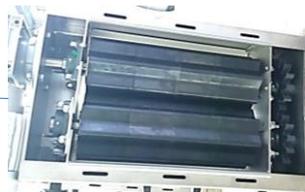

Internal vies of roller after removing protector

Internal view of roller after removing protector



Lubricate bearings: place a grease in one of the holes to provide additional lubricating grease. To replace the internal bearings, insert a screw M6x40, and tighten until the bearing is extracted



OPENING AND REMOVE OF BASKET AND SHAFT

1 Opening machine



2 The shaft does not need to be roated, just pull it straight out.



3 Extracting the basket on models 2012/2013/2014/2015-8
Remove the front drive wheels, loosing the locked bolts. To do this operation, open the basket casing and locate the head of the bolt



head of the bolt

3-BIS Extracting the basket on models 2015-9/2016

Place the basket with the two slots on wheels and lift the basket to remove it from the seat. The wheels must not be removed



NOTICE FOR SIMPLIFIED ABOVE MODELS: PROCEED WITH WELD SUPPORT PIN INSIDE THE WHEEL, IN ORDER TO SIMPLIFY THE REMOVAL OF THE WHEEL ITSELF BY ELIMINATING THE NEED TO USE THE KEY INSIDE
THIS OPERATION MUST BE AGREED WITH ENOITALIA TECHNICAL DEPARTMENT



4 Rotate the basket through the frame until completely removed

