




MoreInstructions™

Sterile Siphon Starter

Kit's Includes:

- 1) 26 inch Stainless Racking Cane
- 2) Red Sediment Reduction Tip
- 3) Carboy Hood
- 4) 5' 3/8" ID Vinyl Tubing
- 5) Stainless Hose Clamp
- 6) Sterile Air Filter

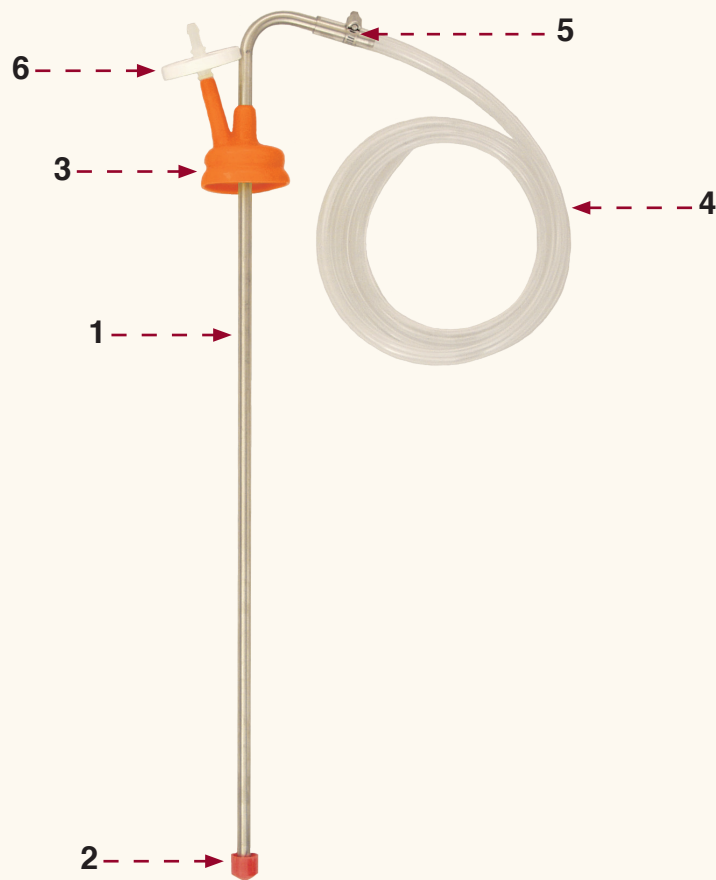

Instructions For Use:

Blow through the sterile air filter (6), this forces the liquid out through racking cane (1). While blowing through the filter, pinch the flexible tubing (4) near the racking cane. Release the pinch on the tubing after 1–2 seconds; continue to blow through filter for 1–2 seconds. Stop blowing through filter and the siphon will begin.

Care instructions for the Sterile Filter:

There is an “in” post and an “out” on your filter. When you first use the filter, the side you use as your “in” & “out” doesn’t matter, however, you want to take note of which side you choose to use and always keep them the same through out the life of the filter. There is a molded in arrow on the edge that we use to keep it always facing that direction when in use. The filter should **never get wet**, so don’t try and clean it by dunking it in sanitizer. If you want to clean the outside of it, use Alpet D2 (CL60) . To store the filter, use a little tinfoil on the “In” of the filter and store in a zip-lock bag.